

**BODY WORK AND TRIM ASSEMBLY**


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1748757	Seat.....	1
2	• 1186130	Rd. Hd. Sq. Neck Screw 3/8-16 x 1-1/4.....	1
3	1743434AJB	Seat Support Assembly.....	1
4	1753022	Compression Spring.....	1
5	1735125	Nut & Washer Assembly.....	1
6	• 1107383	Flat Washer 3/8.....	2
7	1734269	Knob.....	2
8	1753911	Pivot Block.....	2
9	• 1100255	Flat Washer 5/16.....	2
10	• 1100799	Hex Screw 5/16-18 x 1-1/2.....	2
11	1753865	Rear Fender.....	1
12	1753890	Hood Decal.....	1
13	1753891	Hood Decal R.H.....	1
14	1753892	Hood Decal L.H.....	1
15	1753895	Fender Decal R.H.....	1
16	1753896	Fender Decal L.H.....	1
17	• 1186391	Flange Nut 5/16-18.....	7
18	• 1100242	Lock Washer 5/16.....	2
19	• 1186230	Hex Nut 5/16-18.....	2
20	1743987AJB	Running Board Support.....	1
21	1751805AJB	R.H. Running Board.....	1
22	1751803AJB	L.H. Running Board.....	1
23	1742665	R.H. Foot Pad.....	1
24	1742664	L.H. Foot Pad.....	1
25	• 1186330	FL. Lock Screw 5/16-18 x 7/8.....	9
26	1742666	Center Foot Pad.....	1
27	1753125	Instruction Decal.....	1
28	1753902	Operating Instrument Decal.....	1
29	1742934	Angle Speed Nut.....	4
30	• 1111599	Hex Hd. Screw 1/4-20 x 5/8.....	4

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
31	1747836	Retaining Ring.....	6
32	1742459AJB	Hinge Link.....	2
33	1744062AJB	Hinge Strap Assembly.....	2
34	1752914	Grille Support Assembly.....	2
35	1734398	Lock Nut 1/4-20.....	8
36	1742458AJB	Hinge Link.....	2
37	• 1186309	Flange Lock Screw 1/4-20 x 5/8.....	12
38	• 1186389	Flange Lock Nut 1/4-20.....	12
39	1742493AJB	Grille Cap.....	2
40	• 1100069	Hex Hd. Screw 1/4-20 x 1.....	2
41	1742494AJB	Grille.....	1
42	1753912	Side Cover Guide.....	4
43	• 1186059	Pop Rivet 1/8 x 1/4.....	8
44	1743554AJB	L.H. Side Cover.....	1
	1743553AJB	R.H. Side Cover.....	1
45	1744065	Sealing Block.....	2
46	• 1115815	Phil. Hd. Machine Screw..... #10-24 x 5/8.....	4
47	1727127	Rubber Latch.....	2
48	1727126	Clip.....	2
49	1185985	Keps Nut #10-24.....	2
50	1744067	Sealing Strip.....	1
51	1750670	Choke Decal.....	1
52	1744051AJB	Hood Assembly.....	1
53	1753899	Service Instrument Decal.....	1
54	1753901	Reflector.....	2
55	• 1107381	Flat Washer 1/4.....	4
56	1754133	Instrument Panel.....	1
57	1753932	Throttle Decal.....	1
58	1753893	R.H. Side Cover Decal.....	1
59	1753894	L.H. Side Cover Decal.....	1

• Common Hardware - Purchase Locally


**FRAME, LIFT AND  
STEERING ASSEMBLY**

**F-1**

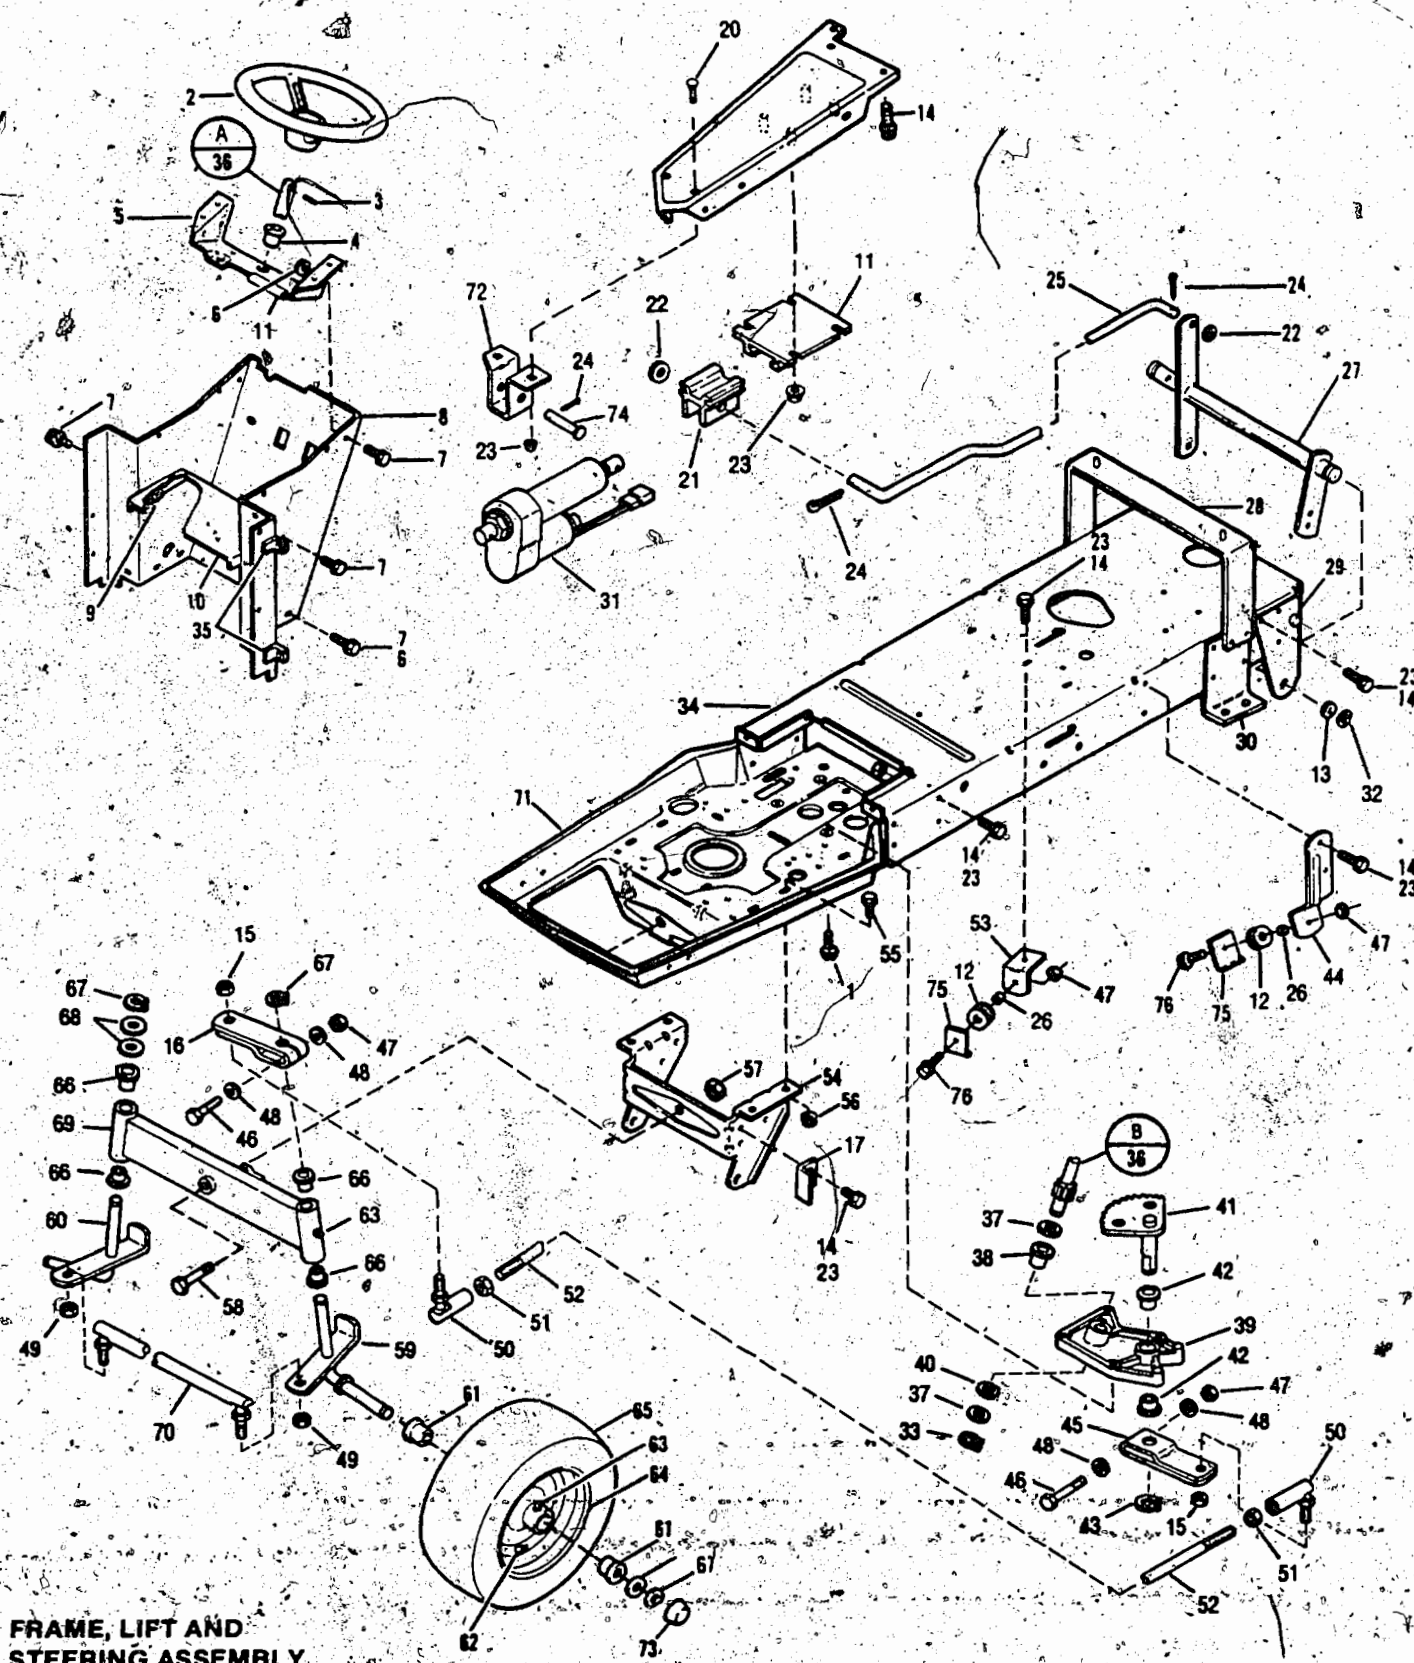

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D	REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1724491	Thd Screw 5/16-18 x 3/4	4	39	1750594	Steering Support Assembly	1
2	1753907	Steering Wheel	1	40	1715301	Thrust Washer	1
3	1703822	Roll Pin 1/4 x 1-1/2	1	41	1750501	Sector Gear Assembly	1
4	1185632	Flange Bearing	1	42	1185386	Flange Bearing	2
5	1752363	Steering Shaft Support	1	43	1113527	Retaining Ring	1
6	1186389	Flange Nut 1/4-20	13	44	1747315	Bracket	1
7	1186309	Flange Screw 1/4-20 x 5/8	17	45	1750581	Spindle Arm Assembly	1
8	1753905	Instr. Panel Support	1	46	1100049AJB	Hex Head Screw 3/8-16 x 2-1/4	1
9	1185456	U Type Speed Nut 1/4-20	4	47	1733398AJB	Hex Lock Nut 3/8-16	4
10	1742172AJB	Battery Support	1	48	1708755	Flat Washer 3/8	4
11	1751069	Stationary Guide	1	49	1110150	Lock Nut 3/8-24	2
12	1862273	Pulley	2	50	1716180AJB	Ball Joint	2
13	1185830	Flat Washer	8	51	1186247	Jam Hex Nut 1/2-20	2
14	1186330	Flange Lock Screw 5/16-18 x 7/8	34	52	1750499AJB	Steering Rod	1
15	1750957	Lock Jam Nut 1/2-20	2	53	1747316	Bracket	1
16	1750495AJB	Steering Arm	1	54	1750811	Attachment Bracket	1
17	1751715	Bracket	2	55	1186345	Flange Hex Screw 3/8-16 x 3/4	4
18	1185427	Retaining Ring	2	56	1186393	Flange Hex Nut 3/8-16	4
19	1747189	Pin	1	57	1110112	Lock Hex Nut 5/8-11	1
20	1186098	Carr. Bolt 5/16-18 x 3/4	2	58	1744453	Hex Hd. Screw 5/8-11 x 2-1/4	1
21	1751067	Sliding Guide	1	59	1750486AJB	L.H. Spindle Assembly	1
22	1107385	Flat Washer 1/2	2	60	1750490AJB	R.H. Spindle Assembly	1
23	1186391	Flange Lock Nut 5/16-18	42	61	1720327	Bushing	4
24	1100350	Cotter Pin 1/8 x 1	3	62	1718086	Valve Stem	2
25	1751070	Lift Rod	1	63	1185976	Grease Fitting	4
26	1747322	Spacer	2	64	1754105	Wheel	2
27	1752414	Lift Shaft Assembly	1	65	1754103	Tire 15 x 6.00-6	2
28	1743430	Fender Support Assembly	1	66	1742133	Flange Bearing	4
29	1749801	Rear Panel Assembly	1	67	1185388	Retaining Ring	4
30	1740984	Axle Support	2	68	1701447	Washer	A/R
31	1750450	Actuator	1	69	1750494AJB	Front Axle Assembly	1
32	1185388	Retaining Ring	2	70	1750841AJB	Tire Rod	1
33	1177567	Retaining Ring	1	71	1742343	Front Frame	1
34	1751802	Rear Frame	1	72	1750307	Lift Bracket	1
35	1742934	Angle Bracket Speed Nut	4	73	1744444	Wheel Cap	2
36	1751284	Steering Shaft	1	74	1706419	Pin, Clevis	1
37	1730375	Shim Washer	3	75	1747320	Cable Guide	2
38	1747303	Flange Bearing	1	76	1100043	Hex Screw 3/8-16 x 1-1/4	2

• Common Hardware - Purchase Locally

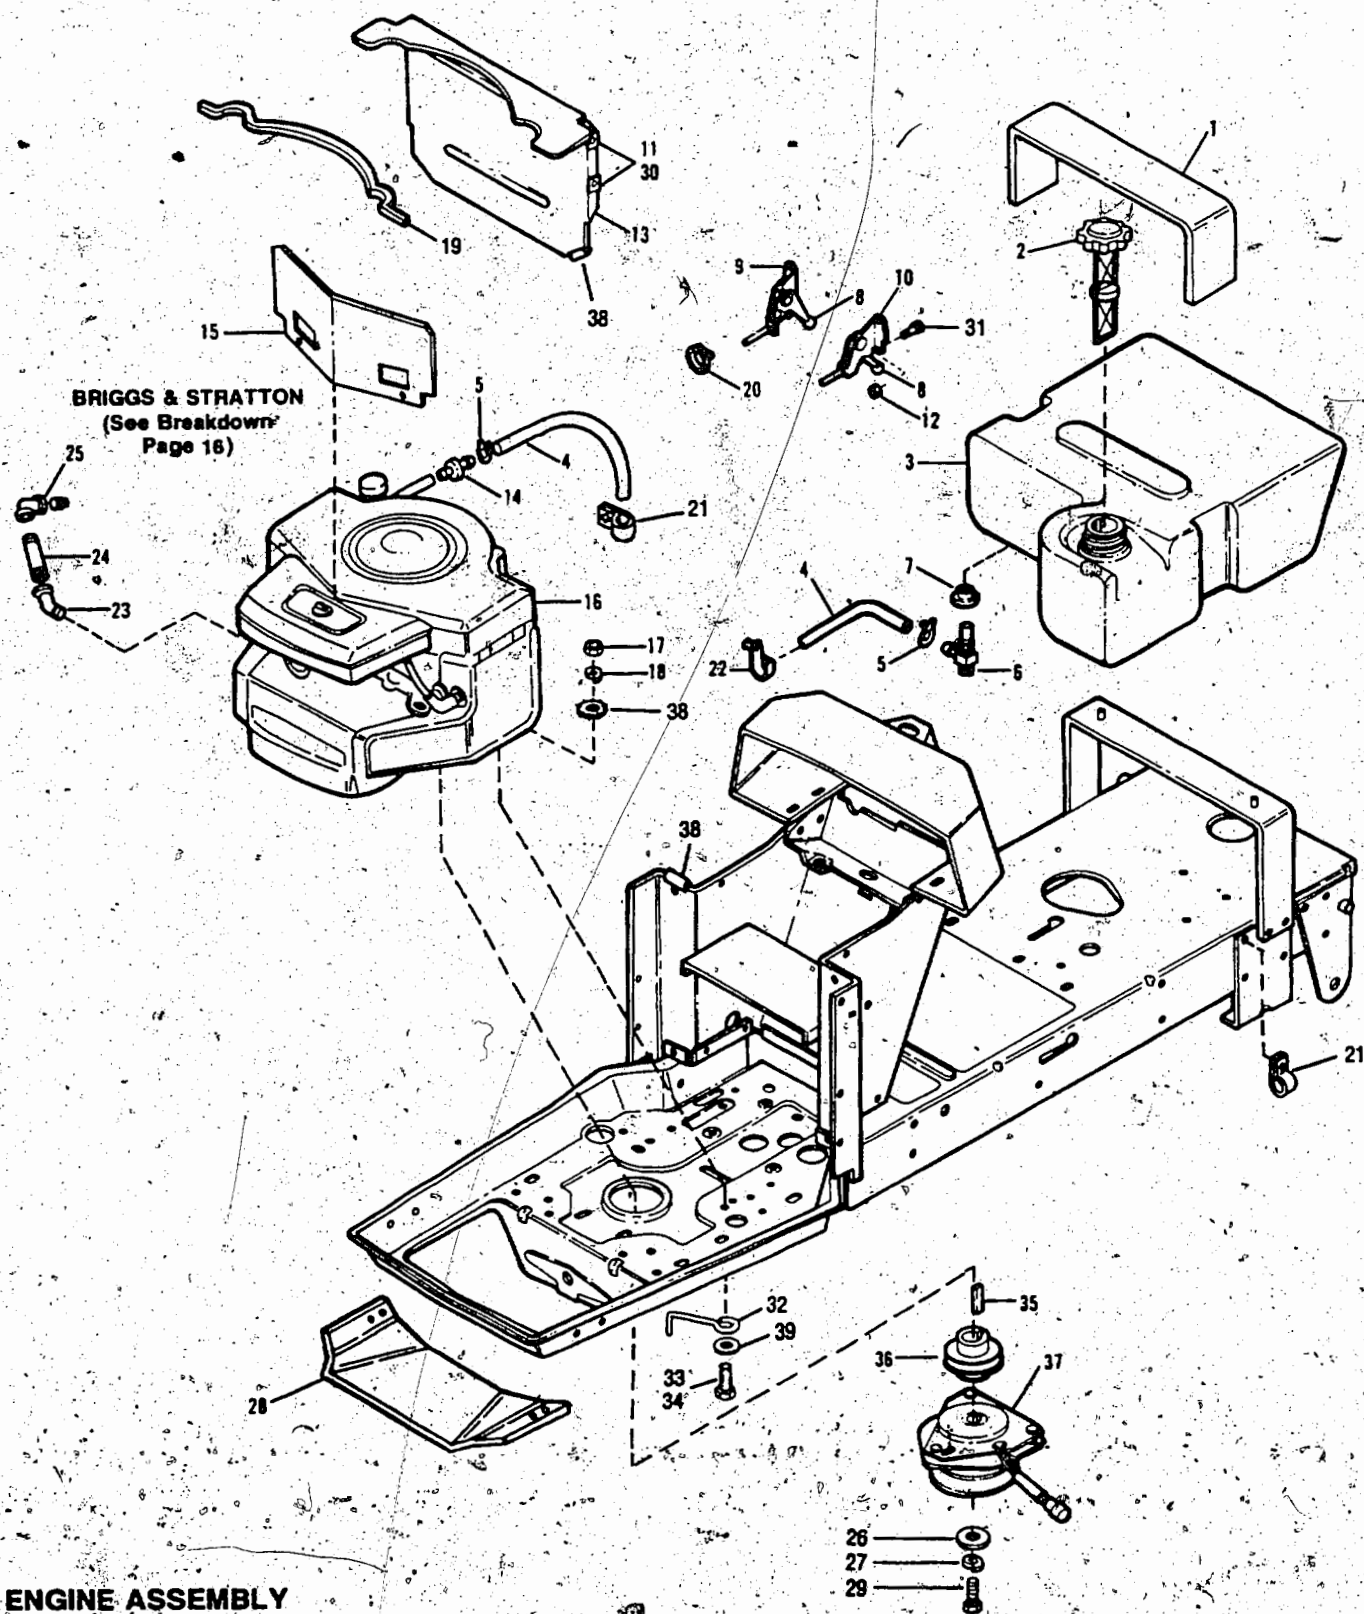




# MODEL 3014H

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D	REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1744390	Fuel Tank Pad .....	1	20	1735531	Wire Tie .....	2
2	1747733	Fuel Tank Gauge .....	1	21	1747738	J-Clip .....	1
3	1747537	Fuel Tank (Incl. Ref. 2) .....	1	22	1745866	Cable Hanger .....	3
4	1752795	Fuel Line .....	1	23	1743683	Street Elbow, 45° .....	1
5	1750687	Hose Clamp .....	2	24	1743685	Pipe Nipple .....	1
6	1751477	Fuel Shut Off Valve .....	1	25	1743684	Elbow, 90° .....	1
7	1738433	Bushing .....	1	26	1744455	Special Washer .....	1
8	1737118	Knob .....	2	27	1100244	Lock Washer 7/16 .....	1
9	1743511	Throttle Control .....	1	28	1748383AJB	Heat Shield .....	1
10	1743512	Choke Control .....	1	29	1744454	Hex Screw 7/16-20 x 3 .....	1
11	1115815	Phil. Hd. Screw #10-24 x 5/8 .....	8	30	1185986	Speed Nut #10-24 .....	4
12	1185985	Keps Nut #10-24 .....	4	31	1750962	Screw, Mach 10-24 x 5/8 .....	4
13	1752882	Heat Shield .....	1	32	1752922	Clutch Stop .....	1
14	1727491	Fuel Filter .....	1	33	1111606	Screw, Hex Hd. 5/16-18 x 2 .....	1
15	1744066	Heat Shield .....	1	34	1100799	Hex Hd. Screw 5/16-18 x 1-1/2 .....	3
16		Engine, B & S 14 H.P. Model 400707 .....	1	35	1748146	Sq. Key 1/4 x 2-1/2 .....	1
17	1186230	Hex Nut 5/16-18 .....	4	36	1742535	Sheave .....	1
18	1100242	Lock Washer 5/16 .....	4	37	1742518	Electric Clutch .....	1
19	1732137	Sealing Strip .....	1	38	1110645	Lock Washer 5/16 .....	1
				39	1100255	Flat Washer 5/16 .....	1

• Common Hardware - Purchase Locally

\* Order Parts from your local Briggs & Stratton Engine Dealer

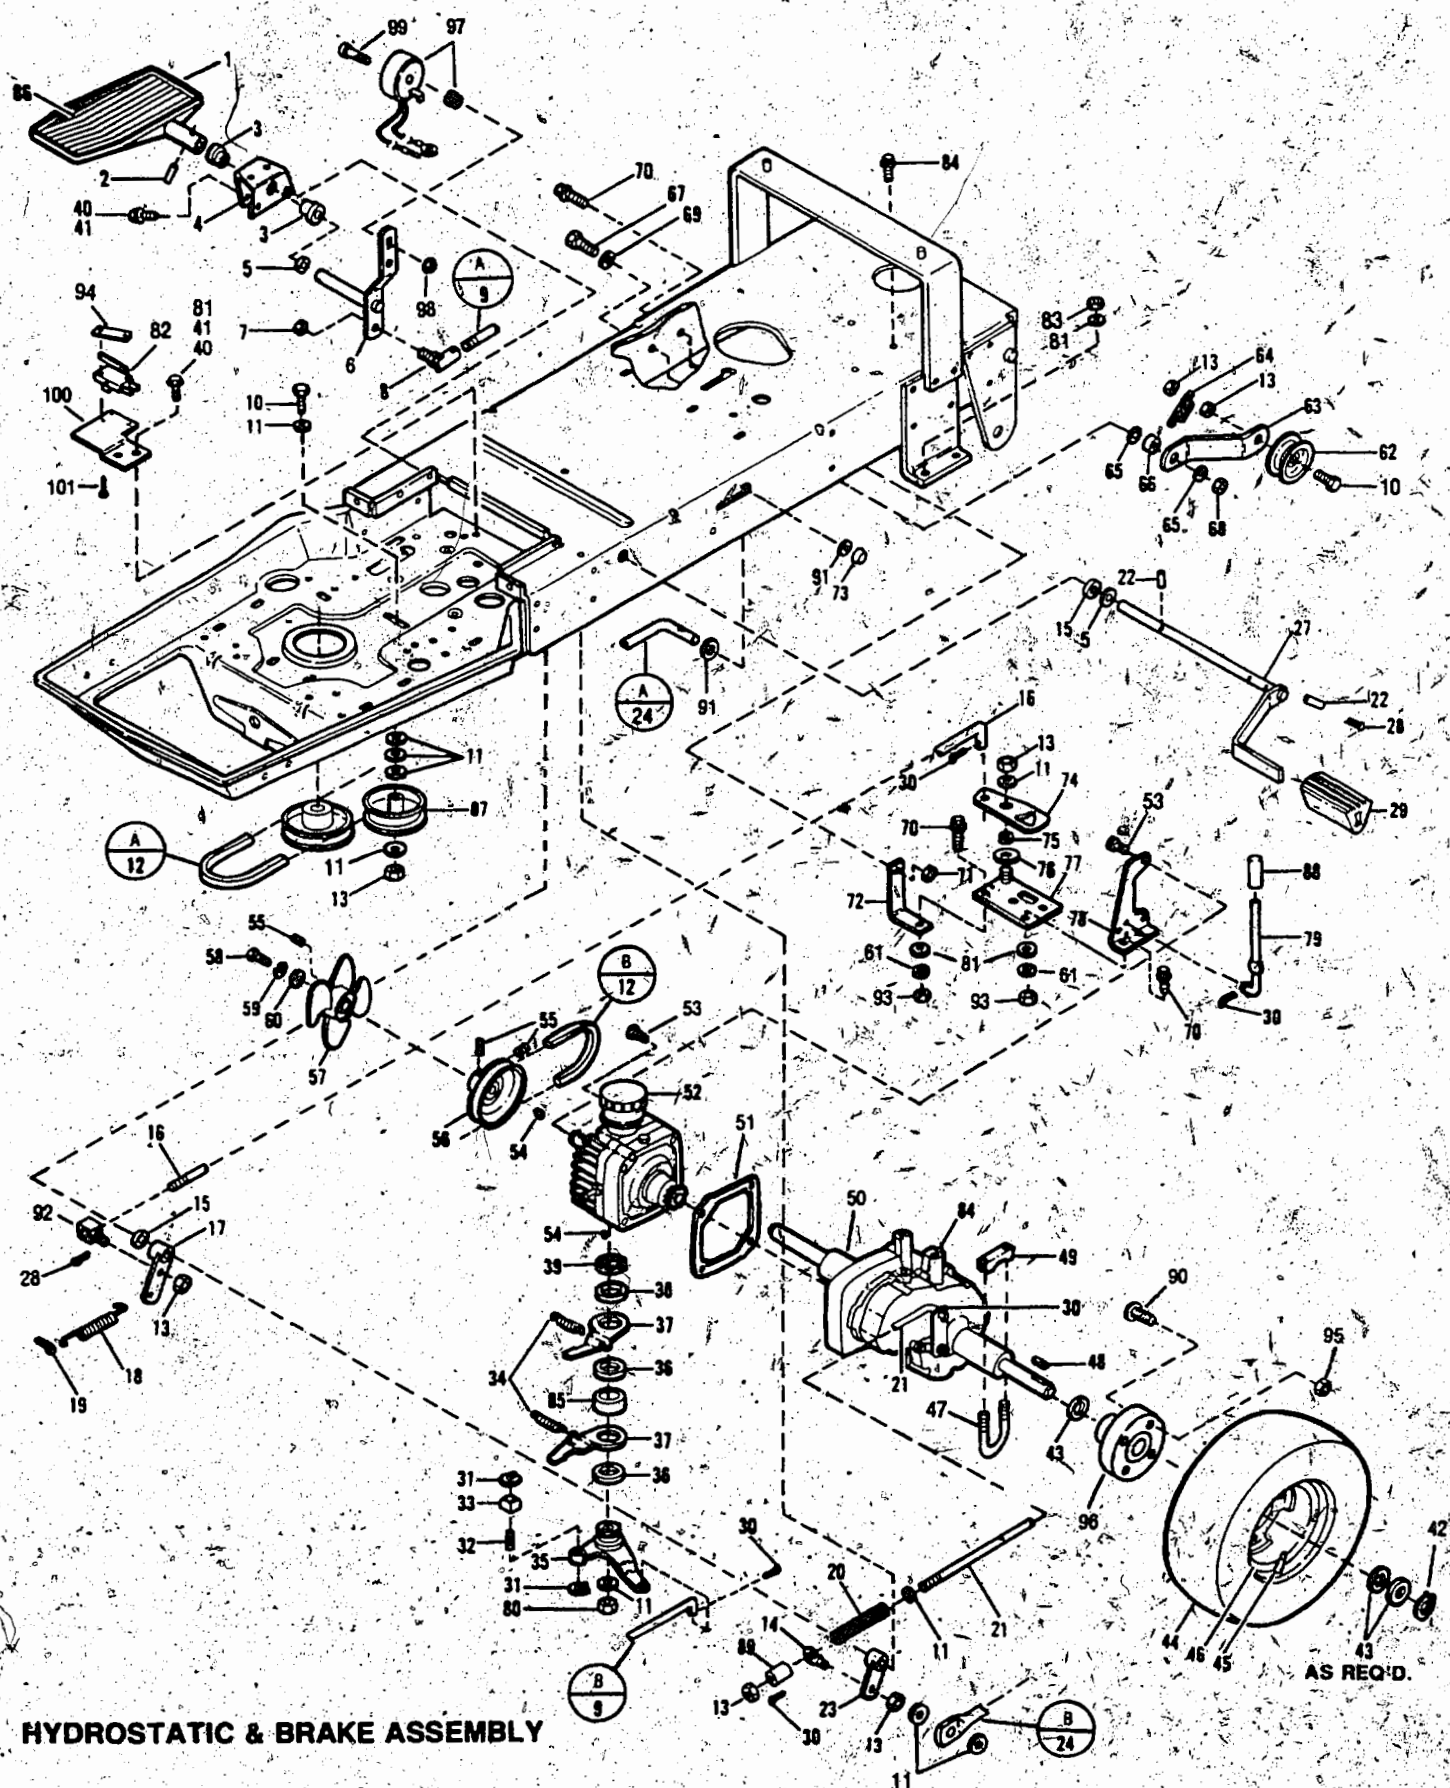

HYDROSTATIC & BRAKE ASSEMBLY

# MODEL 3014H


REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D	REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1743639AJB	Pedal Assembly	1	53	1111614	Hex Hd. Screw 3/8-16 x 3	4
2	1120210	Roll Pin 3/16 x 13/16	1	54	1100905	Woodruff Key 1/8 x 1/2	2
3	1185802	Flange Bushing	2	55	1747166	Set Screw 1/4-28 x 3/8	3
4	1743693AJB	Hydro Pedal Support	1	56	1744089	Hydro Sheave	1
5	1107386	Flat Washer 5/8	2	57	1741953	Fan	1
6	1750738AJB	Accelerator Shaft Assembly	1	58	1111599	Hex Screw 1/4-20 x 5/8	1
7	1110150	Lock Hex Nut 3/8-24	1	59	1100241	Lock Washer 1/4	1
8	1733963	Ball Joint	1	60	1107381	Flat Washer 1/4	1
9	1741866	Speed Control Rod	1	61	1100242	Lock Washer 5/16	3
10	1100049	Hex Hd. Screw 3/8-16 x 2-1/4	2	62	1744090	Idler	1
11	1107383	Flat Washer 3/8	10	63	1741861	Idler Arm	1
12	1741334	V-Belt 84.5"	1	64	1701322	Extension Spring	1
13	1733398	Lock Nut 3/8-16	6	65	1724929	Thrust Washer	2
14	1749904	Special Pivot	1	66	1728030	Sleeve	1
15	1714233	Snap Bushing	2	67	1100064	Hex Hd. Screw 1/2-13 x 1-1/2	1
16	1741858	Cam Plate Rod	1	68	1734514	Lock Nut 1/2-13	1
17	1751881	Arm Ass'y	1	69	1107385	Flat Washer 1/2	1
18	1720612	Extension Spring	1	70	1186330	Flange Lock Screw 5/16-18 x 7/8	4
19	1100360	Cotter Pin 3/16 x 1	1	71	1186391	Flange Lock Nut 5/16-18	1
20	1728908	Compression Spring	1	72	1741867	Bracket	1
21	1746944	Brake Rod	1	73	1747186	Push On Cap	1
22	1120210	Roll Pin 3/16 x 13/16	2	74	1741859	Neutral Plate	1
23	1751880	Arm Assembly	1	75	1732369	Spacer	1
24	1751063	Brake Lock Rod	1	76	1703052	Special Washer	1
27	1751882	Brake Pedal Assembly	1	77	1741872	Neutral Plate Support	1
28	1100350	Cotter Pin 1/8 x 1	2	78	1741873	Neutral Plate Bracket	1
29	1728694	Foot Rest	1	79	1742332	Lever	1
30	1100359	Cotter Pin 1/8 x 5/8	5	80	1186231	Hex Nut 3/8-16	1
31	1118802	Retaining Ring	2	81	1100255	Flat Washer 5/16	5
32	1741851	Control Pin	1	82	1728199	Switch, Interlock	1
33	1720699	Cushion Block	1	83	1732499	Lock Nut 5/16-18	4
34	1720928	Extension Spring	2	84	1186345	Flange Screw 3/8-16 x 3/4	3
35	1743386	Speed Control Arm	1	85	1720706	Bearing	1
36	1720361	Thrust Washer	2	86	1743638	Hydro Pedal Pad	1
37	1720523	Neutralizing Arm	2	87	1749764	Idler	1
38	1720529	Thrust Washer	1	88	1747875	Grip	1
39	1185732	Retaining Ring	1	89	1713783	Spacer	1
40	1186309	Flange Lock Screw 1/4-20 x 5/8	3	90	1753026	Wheel Stud	8
41	1186389	Flange Lock Nut 1/4-20	3	91	1100256	Flat Washer 3/8	2
42	1744566	Retaining Ring	2	92	1748491	Pivot Block	1
43	1747872	Washer	A/R	93	1186230	Hex Nut 5/16-18	3
44	1754162	Tire 20-10.00 x 8	2	94	1727777	Speed Nut Plate	1
45	1718086	Valve Stem	2	95	Buy Local	Lug Nut	8
46	1754161	Wheel Disc	2	96	1753031	Wheel Hub Ass'y	2
47	1747874	U-Bolt	2	97	1753897	Magnet	1
48	1748146	Square Key 1/4 x 2-1/2	2	98	1186396	Nut, Fl. 7/16-20	1
49	1719694	Clamp Saddle	2	99	1750736	Screw, Spec.	1
50		Transaxle, Peerless Model 1327 (See breakdown page 14)	1	100	1750739	Switch Bracket	1
51	1720720	Gasket	1	101	1729480	Screw 4-40 x 5/8	2
52	1741994	Eaton Hydrostatic Transmission Model 7	1				

• Common Hardware - Purchase Locally  
(Grade 5 where applicable)

• Order parts from your local Tecumseh  
Power Products Engine Dealer





# WIRING DIAGRAM

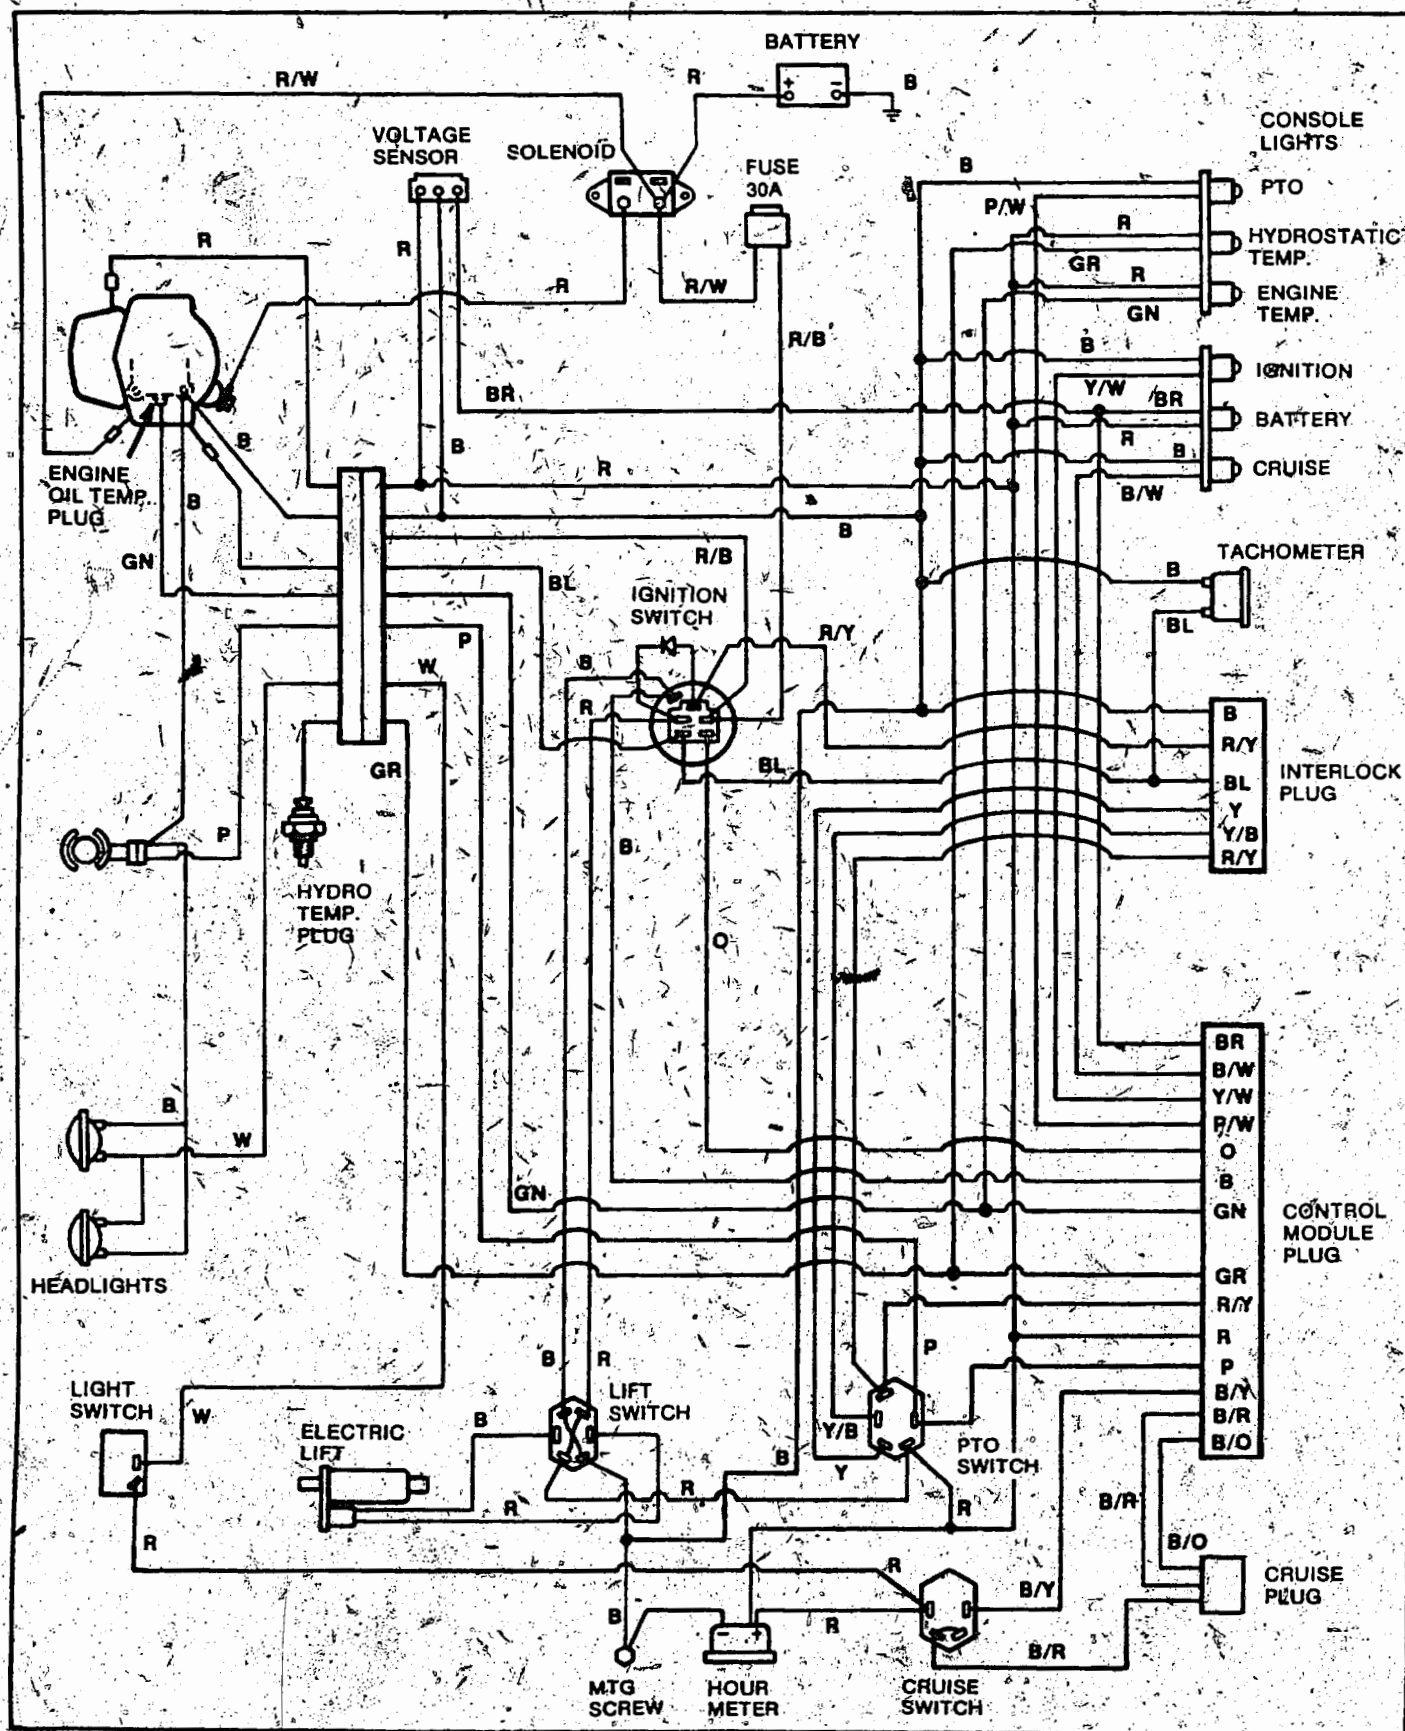


# WIRE COLOR CODE

R- RED	R/W- RED/WHITE
B- BLACK	R/B- RED/BLACK
W- WHITE	R/Y- RED/YELLOW
O- ORANGE	B/W- BLACK/WHITE
Y- YELLOW	B/R- BLACK/RED
P- PURPLE	B/O- BLACK/ORANGE
BL- BLUE	B/Y- BLACK/YELLOW
GN- GREEN	P/W- PURPLE/WHITE
BR- BROWN	Y/W- YELLOW/WHITE
GR- GRAY	Y/B- YELLOW/BLACK


## INTERLOCK PLUG

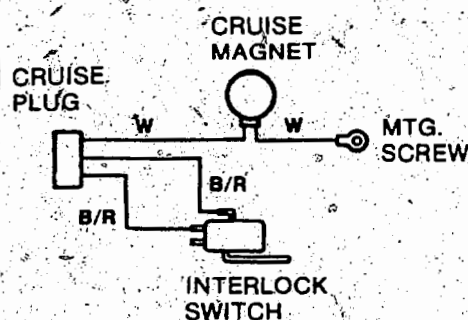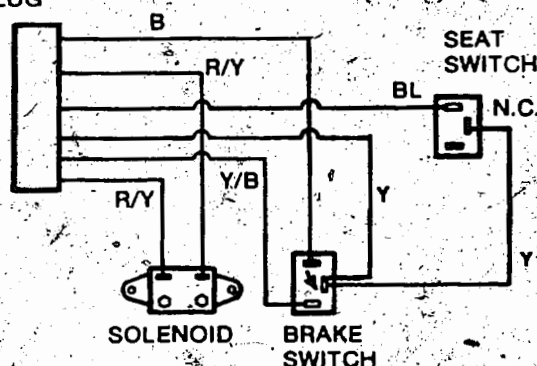

## INTERLOCK PLUG CONNECTOR

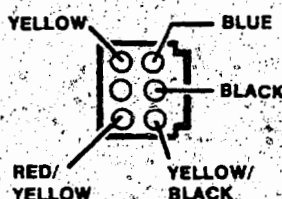


## ENGINE PLUG CONNECTOR

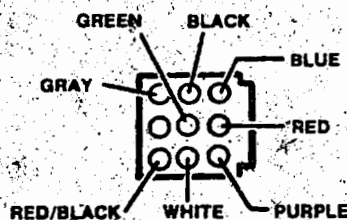


CONNECTORS ARE PART OF INSTRUMENT PANEL HARNESS


## IGNITION SWITCH

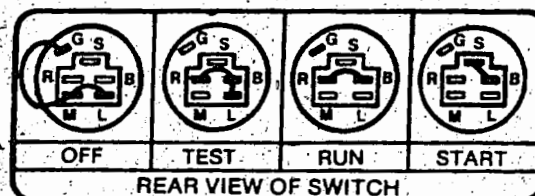


## LIGHT SWITCH

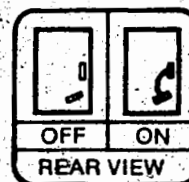


## CRUISE SWITCH

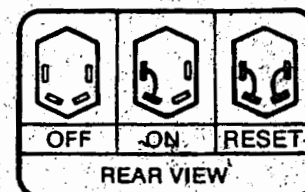


## ELECTRIC LIFT SWITCH

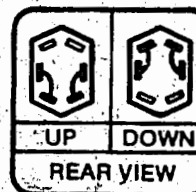


## PTO SWITCH (ATTACHMENT DRIVE)

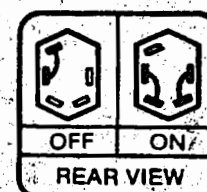


## CONTROL MODULE CONNECTOR

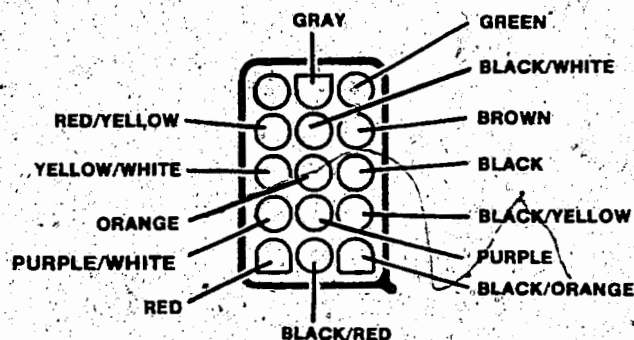

- The Control Module is used to:
1. Check the console lights in the test position of the key switch.
  2. Activate the cruise control.

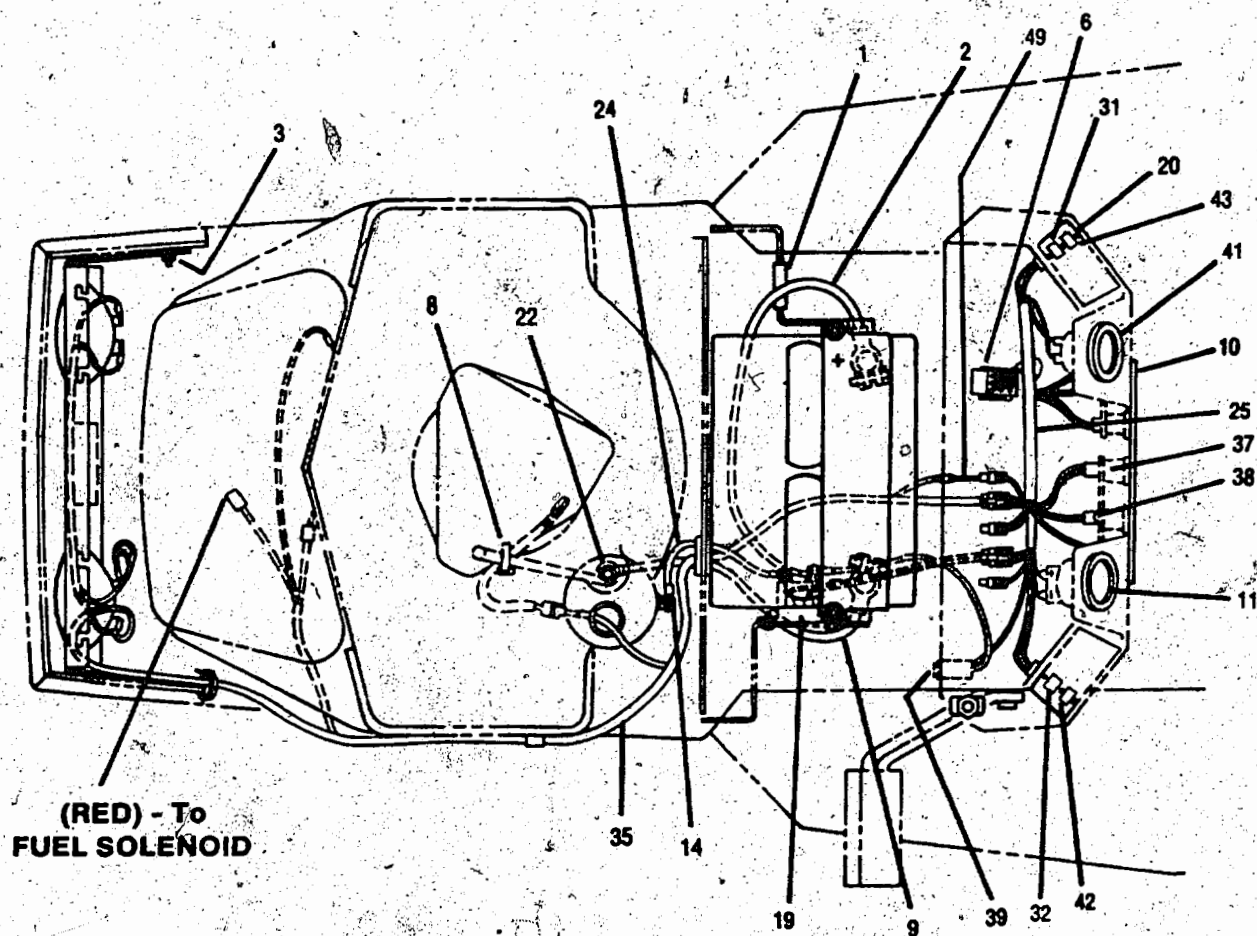


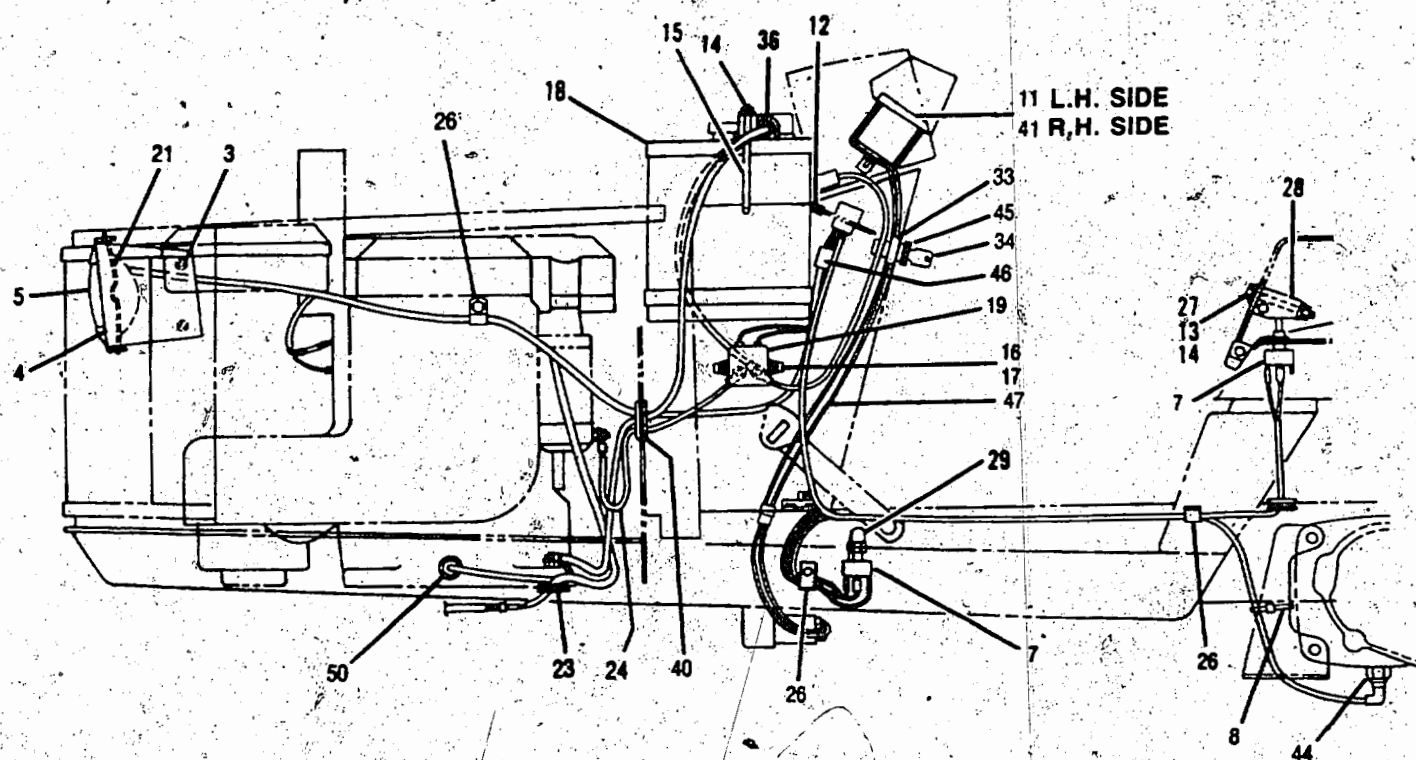

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
1	1737454	Wear Strip .....	1
2	1722732	Battery Cable (Pos.) .....	1
3 •	1186389	Flang Lock Nut 1/4-20 .....	4
4	1744021	Light Support .....	1
5	1753984	Headlight .....	2
6	1753991	Control Module .....	1
7	1742658	Switch .....	2
8	1735531	Wire Tie .....	3
9	1744386	Battery Cable (Neg) .....	1
10	1753900	Lense .....	1
11	1748719	Hour Meter .....	1
12	1744580	Seal Strip .....	1
13 •	1107381	Flat Washer 1/4 .....	1
14	1734398	Hex Lock Nut 1/4-20 .....	4
15	1742173	J-Bolt .....	2
16	1115815	Phil. Hd. Screw #10-24 x 5/8 .....	2
17	1185986	Nut #10-24 .....	2
18	1751498	Battery .....	1
19	1753539	Solenoid .....	1
20	1750963	Screw 6-32 x 1/2 .....	4
21	1744022	Retainer .....	2
22 •	1186230	Hex Nut 5/16-18 .....	1
23	1748014	Grommet .....	2
24	1722081	Starter Cable .....	1
25	1753944	Console Wire Harness .....	1
26	1747738	J-Clip .....	3

REF. NO.	PART NO.	DESCRIPTION	NO. REQ'D
27 •	1100089	Hex Screw 1/4-20 x 2-1/2 .....	1
28	1753911	Pivot Block .....	1
29	1733576	Switch-Seal .....	1
30	1752135	Interlock Harness .....	1
31	1751415	PTO Switch .....	1
32	1751496	Light Switch .....	1
33	1754183	Ignition Switch .....	1
34	1753986	Ignition Key .....	1
35	1753945	Harness, Engine .....	1
36	1739631	Cover .....	1
37	1751572	Bulb .....	6
38	1186020	Thd Cut Screw 6-32 x 3/8 .....	2
39	1743516	Replacement Fuse, 30A .....	1
40	1752809	Grommet .....	1
41	1753946	Tachometer .....	1
42	1752501	Switch, Cruise .....	1
43	1753874	Switch, Electric Lift .....	1
44	1753855	Switch, Temp. (Hydro) .....	1
45	1754082	Nut, Key Switch .....	1
46	1752132	Voltage Sensor .....	1
47	1751088	Lift Harness .....	1
48	1753886	Harness Cruise .....	1
49	1744489	Diode Ass'y .....	1
50	1753854	Switch, Temp. (Engine) .....	1

• Common Hardware Purchase Locally (Grade 5 where applicable)

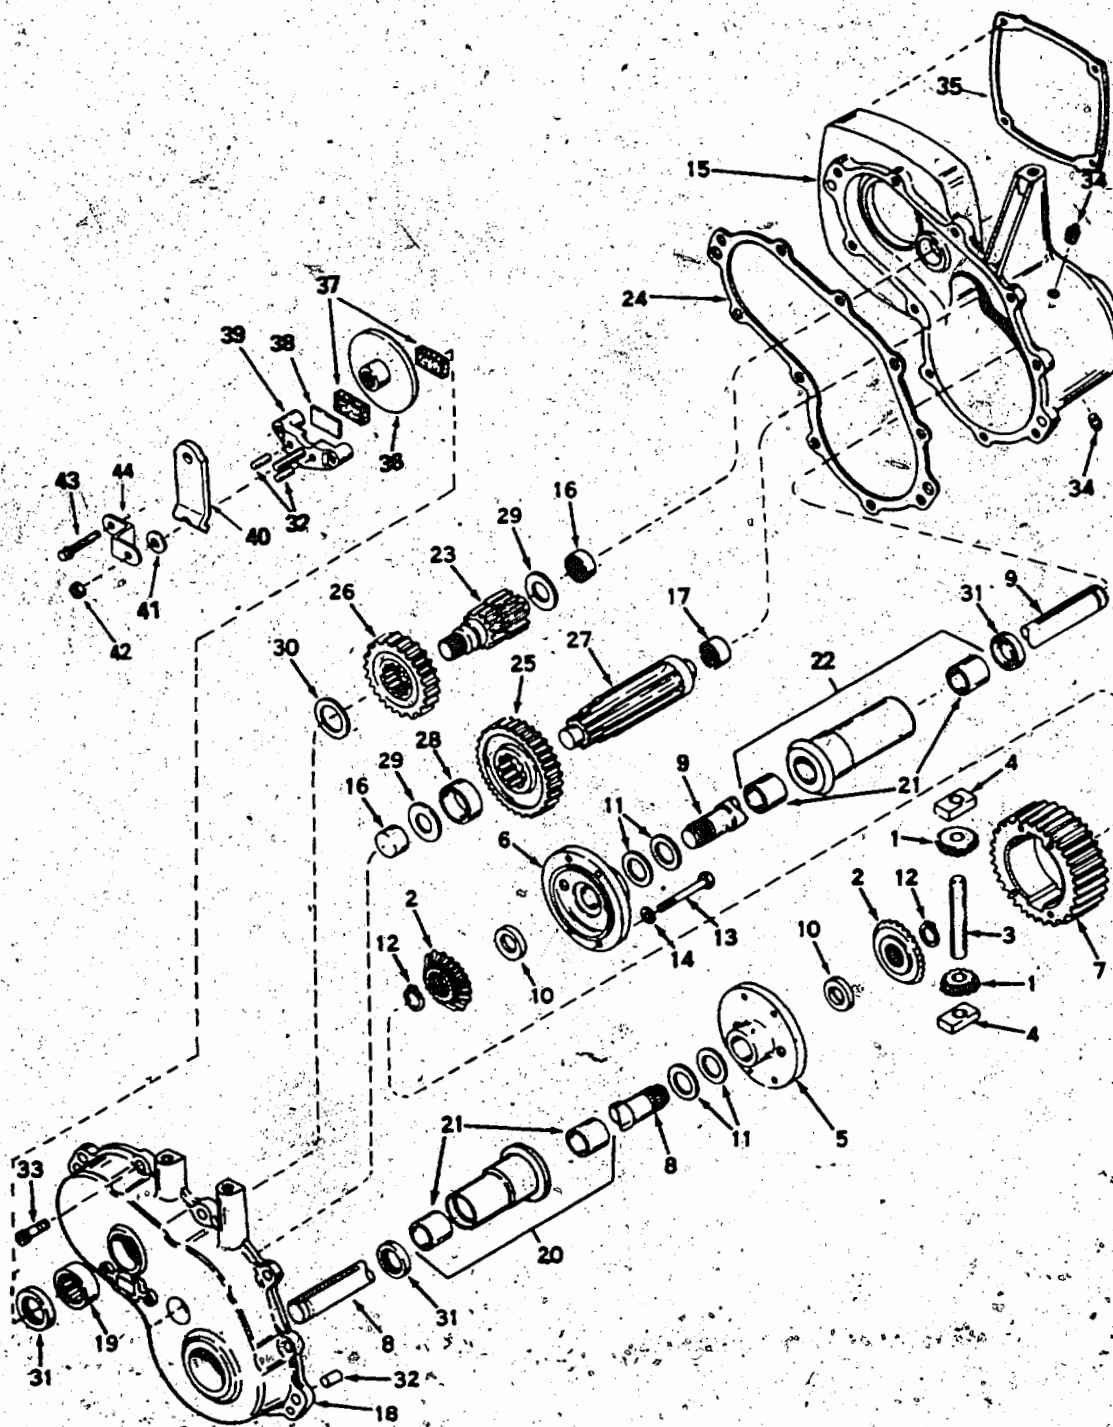

GEAR REDUCTION AND DIFFERENTIAL, MODEL 1327C



ORDER ALL PEERLESS PARTS FROM YOUR NEAREST  
POWER PRODUCTS TECUMSEH ENGINE DEALER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	778197	Bevel Pinion	22	782042A	Housing and Bushing
2	778198	Bevel Gear			Assembly (8-5/8" long)
3	786019	Drive Pin			(Incl. 2 of No. 21)
4	786027	Drive Block	23	776207	Brake Shaft
5	774028A	Differential Carrier	24	788044	Case-to-Cover Gasket
6	774029A	Differential Carrier	25	778036	Output Gear
7	778033A	Ring Gear	26	778083	Idler Gear
8	774526	Axle (13-11/64" long)	27	778041	Output Shaft
9	774527	Axle (15-11/64" long)	28	786017	Spacer
10	780107	Washer	29	780001	Washer
11	780042	Thrust Washer	30	780090	Washer
12	792018	Snap Ring	31	788008	Oil Seal
13	792020	Hex Hd. Screw, 1/4-20 x 2-1/4	32	786026	Dowel Pin
14	792006	Lockwasher 1/4"	33	792046	Hex Washer Hd. Screw, Thread Forming, 1/4-20 x 1
15	770072	Case Assembly (Incl. Nos. 16 & 17)	34	792010	Pipe Plug
16	780013	Needle Bearing	35	788046	Gasket
17	780088	Needle Bearing	36	790027	Brake Disk
18	772085	Cover Assembly (Incl. Nos. 16 & 19)	37	790006	Brake Pad
19	780089	Needle Bearing	38	790007	Brake Pad Plate
20	782041A	Housing and Bushing Assembly (6-5/8" long) (Incl. 2 of No. 21)	39	790025	Brake Pad Holder
21	780054	Bushing	40	790031	Brake Lever
			41	792076	Flat Washer
			42	792075	Locknut 5/16-24
			43	792073	Hex Hd. Screw, Thread Forming, 1/4-20 x 1-1/4
			44	786086	Bracket